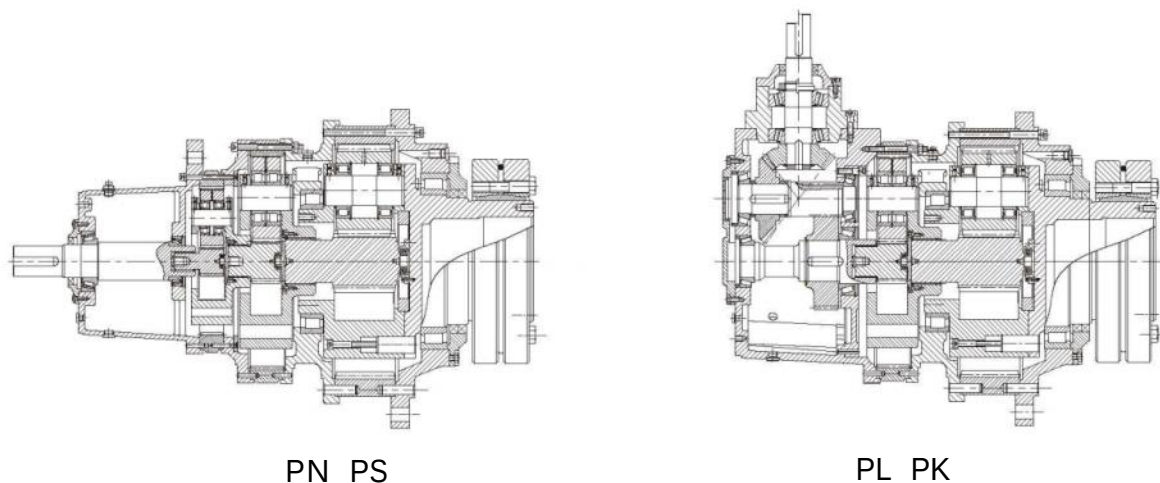 




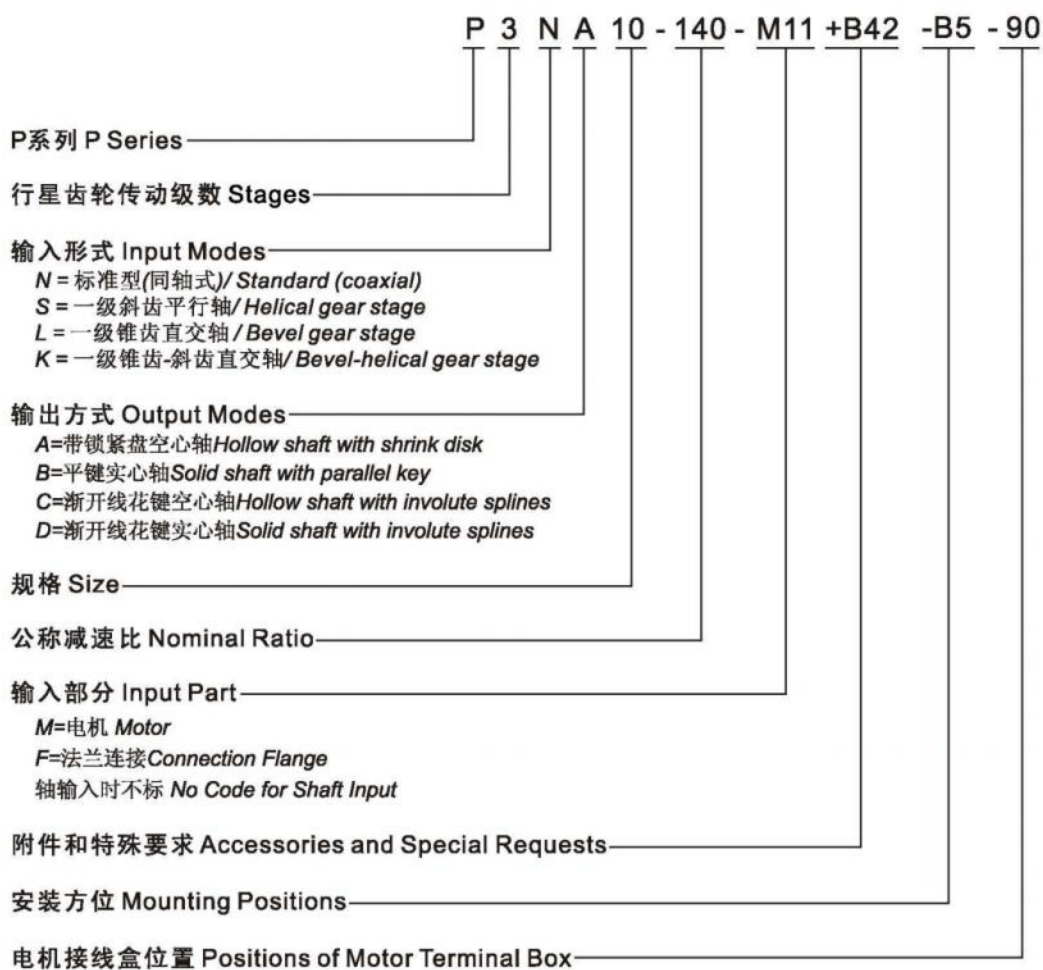 
1 结构示意图:

1 Sectional Drawings:



2 型号表示方法:

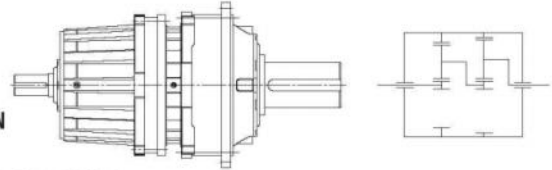 
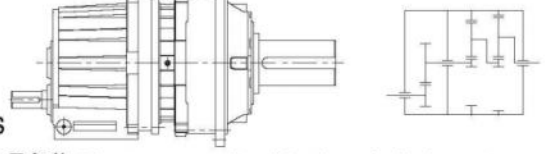 
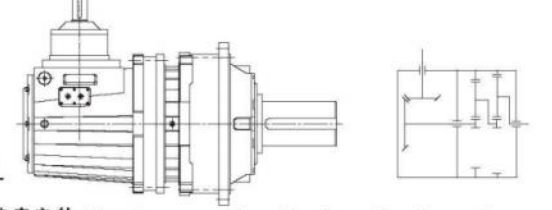 
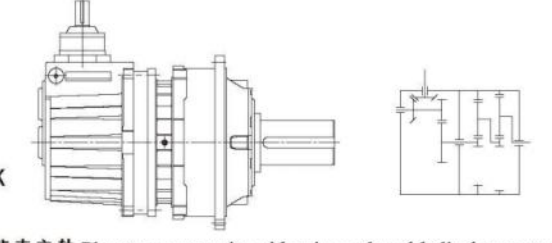 
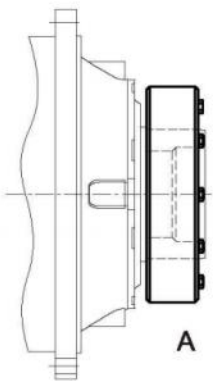 
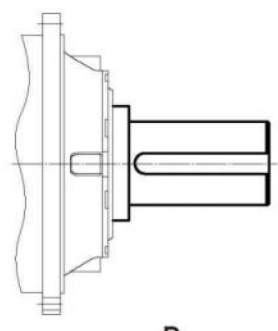 
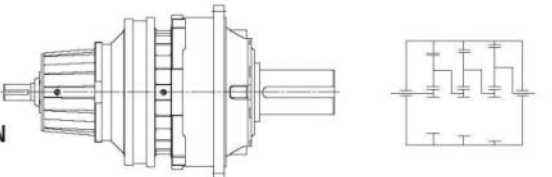 
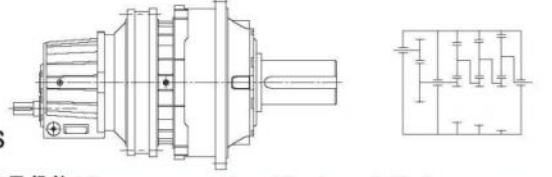 
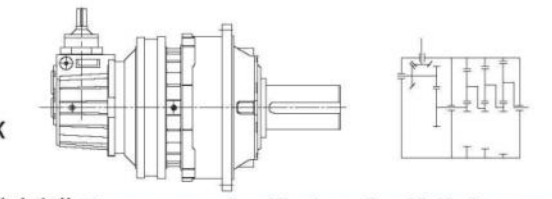 
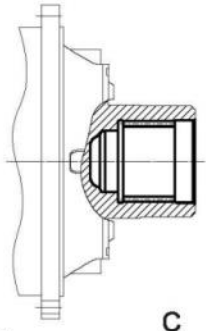 
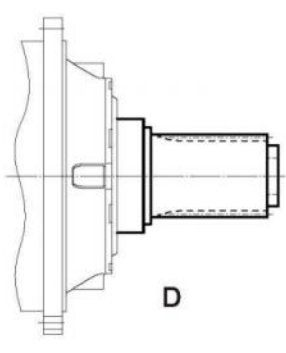 
2 Type Designation:





3 齿轮箱输入\输出方式:

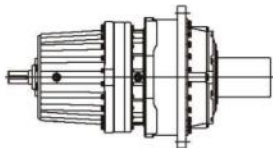 
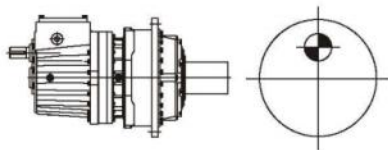 
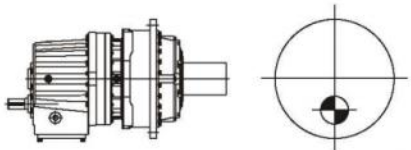 
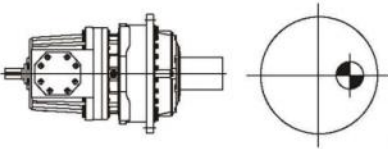 
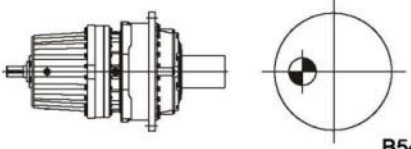 
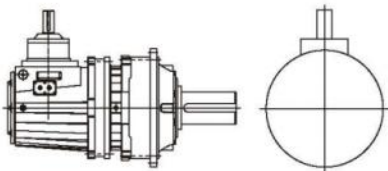 
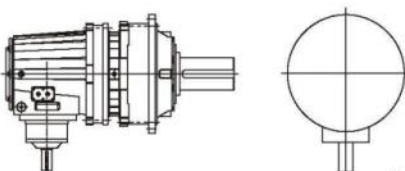 
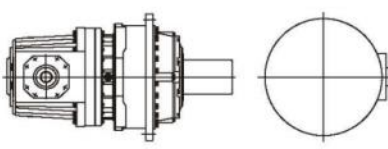 
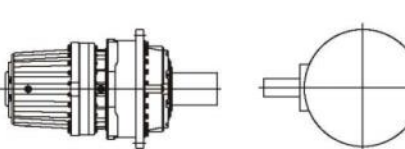 
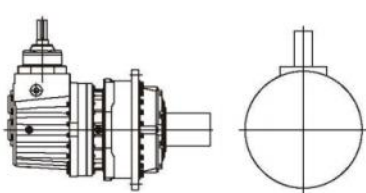 
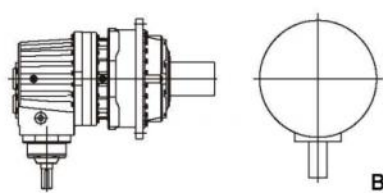 
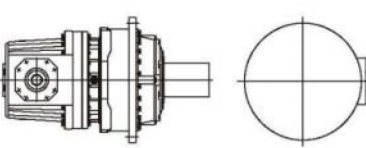 
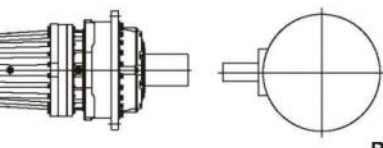 
3 Input and Output Modes:

输入形式 Input modes:	输出方式 Output modes:
二级行星齿轮传动 2-stage planetary gear unit P2N.. (i:25-40)  N 标准型(同轴式) Standard (Coaxial) P2S.. (i:45-125)  S 一级斜齿平行轴 Planetary gear units with primary helical gear stage P2L.. (i:31.5-100)  L 一级锥齿直交轴 Planetary gear units with primary bevel gear stage P2K.. (i: 112-500)  K 一级锥齿-斜齿直交轴 Planetary gear units with primary bevel-helical gear stage	P..A..  A 锁紧盘空心轴 Hollow shaft with shrink disk P..B..  B 平键实心轴 Solid shaft with parallel keys
三级行星齿轮传动 3-stage planetary gear unit P3N.. (i:140-280)  N 标准型(同轴式) Standard (Coaxial) P3S.. (i:280-900)  S 一级斜齿平行轴 Planetary gear units with primary helical gear stage P3K.. (i:560-4000)  K 一级锥齿-斜齿直交轴 Planetary gear units with primary bevel-helical gear stage	P..C..  C 花键空心轴 Hollow shaft with internal splines P..D..  D 花键实心轴 Solid shaft with external splines



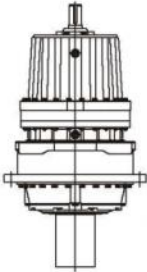 
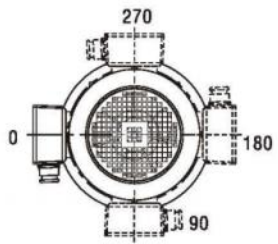 
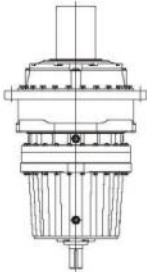 
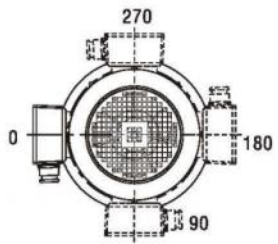 
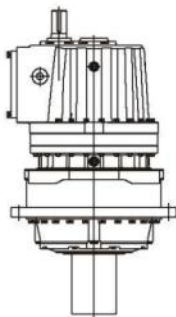 
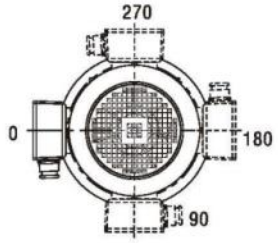 
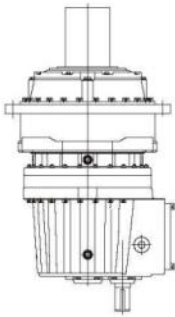 
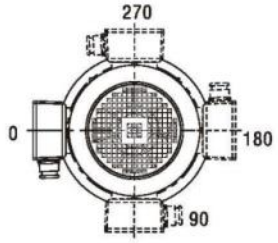 
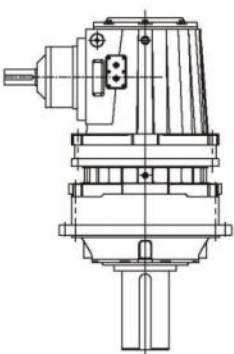 
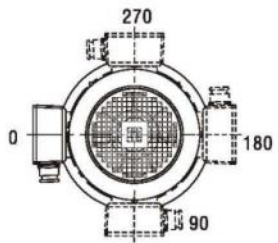 
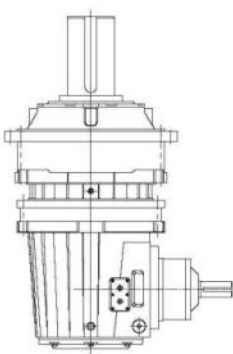 
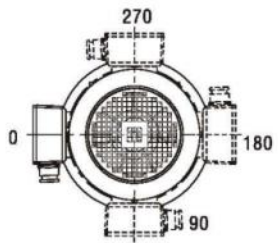 
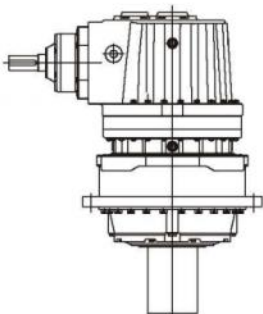 
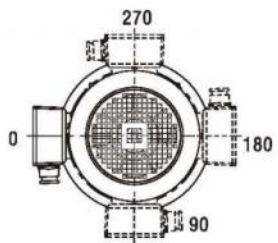 
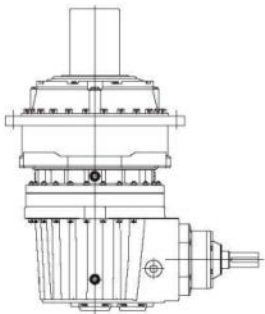 
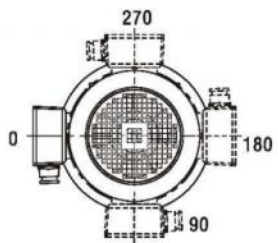 
4 安装方位和电机接线盒位置:

4 Mounting Position, Position of Motor Terminal Box:

		水平安装 Horizontal	
1 同轴式齿轮箱 Coaxial planetary gear units	P.N.		
			B5
2 斜齿 - 行星齿轮箱 Helical-planetary gear units	P.S.		
		B51*	B53
			
		B52	B54
3 锥齿 - 行星齿轮箱 Bevel-planetary gear units	P.L.		
		B51*	B53
			
		B52	B54
4 锥齿 - 斜齿 - 行星齿轮箱 Bevel-helical-planetary gear units	P.K.		
		B51*	B53
			
		B52	B54

* 需考虑齿轮箱的润滑, 请与我司联系。



垂直安装 Vertical		电机接线盒位置 Position of Motor Terminal Box
	V1	
	V3	
	V11	
	V31	
	V11	
	V31	
	V11	
	V31	

* If lubrication required, please consult us.