



# 外形安装尺寸 Mounting Dimension Sheets-overview

## RX127


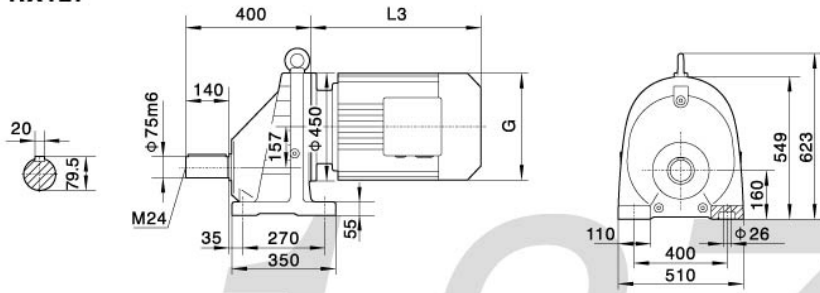


## RX..S127

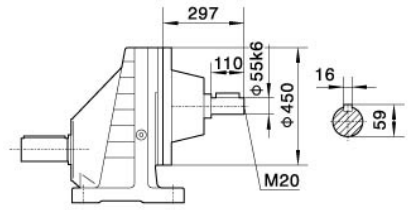

电机需方配时或配特殊电机时需加联接法兰  
When equipping the user's motor or the special one, the flange is required to be connected.


## RXF127

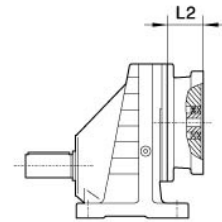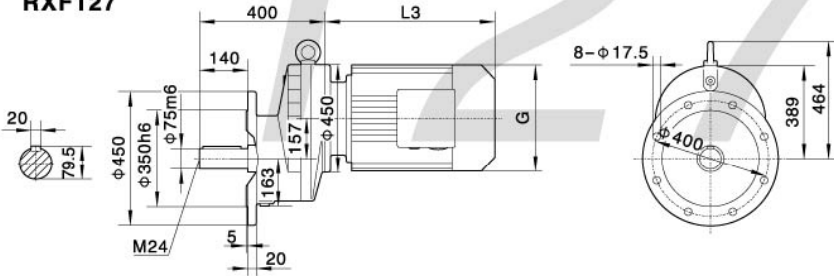


注：其余尺寸见相应的结构形式  
Note: For other values please refer to the oppsited structure

Y <sub>2</sub> 电机机座号 Motor size	132M	160M	160L	180M	180L	200	225S	225M	250	280S	280M
功率/4P Power/(kW)	7.5	11	15	18.5	22	30	37	45	55	75	90
L3	424	567	602	583	616	654	674	696	775	845	845
G	275	330	330	380	380	420	470	470	510	580	580
L2	132	132	132	132	132	132	143	143	120	120	120

## RX157


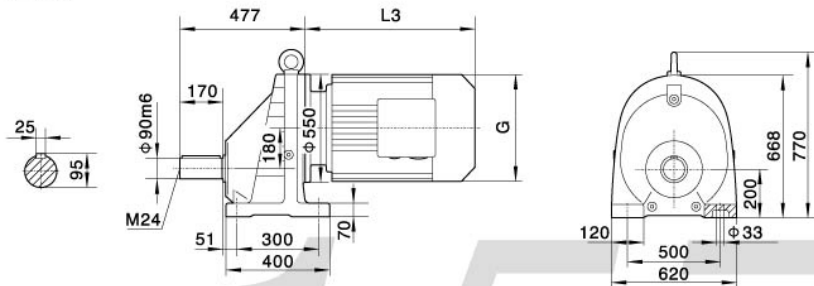


## RX..S157

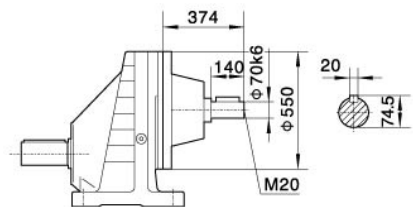

电机需方配时或配特殊电机时需加联接法兰  
When equipping the user's motor or the special one, the flange is required to be connected.

## RXF157

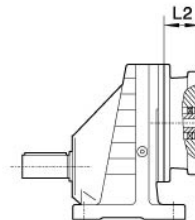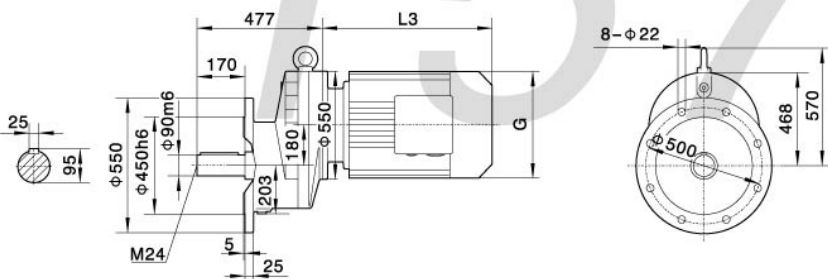

注：其余尺寸见相应的结构形式  
Note: For other values please refer to the oppsited structure

Y <sub>2</sub> 电机机座号 Motor size	160M	160L	180M	180L	200	225S	225M	250	280S	280M	315S	315M
功率/4P Power/(kW)	11	15	18.5	22	30	37	45	55	75	90	110	132
L3	567	602	635	666	642	669	691	770	828	879	1100	1130
G	330	330	380	380	420	470	470	510	580	580	645	645
L2	143	143	143	143	143	143	143	143	143	143	145	145

注：“RX..”表示RX、RXF

Note:“RX..”mean RX、RXF